WiFi modulio konfigūravimo instrukcija

> Šilumos siurbliams NPH; NPT; NPET

12 m 12 2 4 12



#### Dėmėsio!

Prieš pajungiant WiFi modulio maitinimą būtina prijungti anteną. Be pajungtos antenos WiFi modulis gali sugesti.

## WiFi modulio konfigūravimas

Integruotam WiFi moduliui gamykloje būna atlikta "reset" procedūra ir WiFi modulis būna paruoštas konfigūravimui pagal toliau pateiktas instrukcijas.

Tačiau jei prie WiFi modulio nepavyksta prisijungti, arba reikalingas perkonfigūravimas, atlikite "reset" procedūrą kaip parodyta žemiau.

#### 1. Pajunkite WiFi modulio maitinimą.

Paspauskite "reset" mygtuką ≥6 sekundes. WiFi modulis nusistatys į siuntimo režimą ir bus galima jį konfigūruoti.

Jei "reset" padarytas teisingai, degs tik raudonas LED. Po kelių sekundžių užsidegs žalias LED.





2. Jjunkite Jūsų kompiuterio ar mobilaus telefono WiFi nustatymus, suraskite WiFi įrenginį "USR-W600" ir prisijunkite prie jo.

Currently connected to: Telia-3EBA57-Greitas Internet access	<del>\$</del> 9	
Wireless Network Connection	^	
Telia-3EBA57-Greitas Connected	.all	
USR-W600	31	
Information sent over this network n be visible to others.	night	
Connect automatically	ect	
		Prisijunkite prie WiFi modulio
		L

3. Paleiskite interneto naršyklę ir įveskite adresą 10.10.100.254

) Naujas skirtukas	× +			x
$\leftrightarrow$ $\rightarrow$ X (10) 10.10	.100.254	☆	Θ	:
Taikomosios programos				»

4. Įveskite vartotoją "admin" ir slaptažodį "admin" prisijungimui prie WiFi modulio.

http://10.10.100.25	4
lūsų ryšys su šia sv	etaine nēra privatus
Vartotojo vardas	admin
Slaptažodis	
Slaptažodis	



5. Viršutiniame dešiniajame kampe pasirinkite anglų kalbą "English"

25	有人物联网		有人在认真做事!
8845		NC.	800F
an i pan	RIMMACI (	068045F7A576	
2188	SELECTION OF ST	blaw Mat	10000020000
enna)	50683 I	170	##.
	WERE A	Ψ.	WITTERTO
911 M 4	AP BUCP : 1	0.10.100.254	AP., Sution, APSTA
8798A	AP 微式透露	6	
	AP 980, 1	750 exad	
	AP 加田根式: A	ONE	

6. WiFi Work Mode nustatykite į "STA Mode"

Web:V2.4.3 Firm	ware Version:V3.0.0	史文
Ŕ	USR IOT -IOT Experts-	Be Honest, Do Best!
System Status	WiFi Mode Select	Help
WiFi Setting	WiFi Work Mode: STA mode 🔻	Network
Trans Setting	STA Mode	Name(SSID):
Extra Function	Network Name(SSID): USR-W600 Search	Case sensitive
System Setting	STA Password: NONE	Password: The AP password is 8-54 butes
Firmware Update	DHCP: Enable	(STA password
About USR	Save	restriction), NONE said no encryption: Case

7. Paspauskite "Search" namų WiFi tinklo paieškai.

Web:V2.4.3 Firmw	are Version:V3.0.0			堂
~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	USR IOT -IOT Experts-		Be Ho	nest, Do Best!
System Status		WiFi Mode Select		Help
WiFi Setting	WiFi Work Mode:	STA mode •		• Network
Trans Setting		STA Mode		Name(SSID):
Extra Function	Network Name(SSID):	USR-W600	Search	Case sensitive
System Setting	STA Password:	NONE		Password: The AP password     in 8 64 bitser
Firmware Update	DHCP:	Enable		(STA password
About USR	L	Save		restriction), NONE said no encryption; Case



8. Pasirinkite WiFi tinklą prie kurio jungsitės ir patvirtinkite paspauskite OK.

Web:V2.4.3 Firmw	rare Ve	rsion:V3.0.0				生文	
Ŕ	US -101	SR IOT 1 Experts-			Be	Honest, Do Best!	
System Status	Site	Suprav	Please select a SSID			Help	^
WiFi Setting	Sile	SSID	BSSID	RSSI	Channel	Network	
Trans Setting	•	Telia-3EBA57-Greitas	A4:91:B1:3E:BA:57	-38	11	Name(SSID):	
Extra Function						Case sensitive	
System Setting						<ul> <li>Password: The AP password</li> </ul>	
Firmware Update						is 8-64 bytes (STA password	
About USR						restriction), NONE	
						said no encryption; Case sensitive	
						DHCP: Open this feature.	
						will get IP by dhcp; turn off,	
			OK Refresh			need to manually	

9. Jei reikalinga, suveskite namų WiFi tinklo slaptažodį. Nepamirškite po to patvirtinti "Save". Jei WiFi tinklas nerastas, suveskite jo duomenis rankiniu būdu.

Web:V2.4.3 Firmw	are Version:V3.0.0	生文
<u></u>	USR IOT -IOT Experts-	Be Honest, Do Best!
System Status	WiFi Mode Select	Help
WiFi Setting	WiFi Work Mode: STA mode 🔻	Network
Trans Setting	STA Mode	Name(SSID): 1-32 characters
Extra Function	Network Name(SSID): Telia-3EBA57-Greitas Search	Case sensitive
System Setting	STA Password: AW7182AL49	Password: The AP password
Firmware Update	DHCP: Enable	(STA password
About USR	WiFi tinklo slaptažodis tinkla	Without this restriction), NONE said no encryption; Case sensitive • DHCP: Open this feature,



10. Įeikite į meniu "Trans Setting" lango kairėje ir nustatykite: Protocol: TCP-Client Port: 18899.
Server IP address: <u>www.myheatpump.com</u>. Paspauskite "Save" nustatymų išsaugojimui.

Web:V2.4.3 Firmwa	re Version:V3.0.0			生文
	USR IOT -IOT Experts-		Be Ho	onest, Do Best!
System Status		Serial Port Setting		Help
WiFi Setting	Baud Rate (1200-460800 bps):	115200 •	bps	. Baud Pate:
Trans Setting	Data Bits:	8 •	bit	1200~460800bps
Extra Function	Paeity:	None •	]	CTSRTS/485: Default is NFC
Sustem Cattion	Stop Bits:	1 •	bit	Port:
System Setting	CTSRTS/485	NFC •		1~65535
Firmware Update		Network Setting		Server IP     Address:
About USR	Mode:	Transparent •	]	When the module is Client, the
	So	cketA Connect Setting		remote server
	Protocol:	TCP-Server •	]	connected; When
	Port:	8899	]	the parameter is
	Server IP Address:	10.10.100.254	]	invalid; The parameter can be
	So	cketB Connect Setting		IP or domain name
	Protocol:	TCP-Client •	]	
	Port:	18899	]	
	Server IP Address:	www.myheatpump.com	]	
		Save		

## 11. Paspauskite "Restart"

Web:V2.4.3 Firmw	are Version:V3.0.0	文史
Ŕ	USR IOT Be Hon	nest, Do Best!
System Status	Save Success	help
WiFi Setting	Save Success	Restart:
Trans Setting	Configurations will take effect after restart. After restart, you will need to re-login the configuration interface for other settings, so	Parameters take effect after
Extra Function	it is recommended to restart after completing all settings. Please click [Restart] to restart now, or click [Back] to continue setting.	restart
System Setting	You can restart after all configuration.	
Firmware Update	Restart	
About USR		



## WiFi modulis persikraus:

Web:V2.4.3 Firmw	are Version:V3.0.0	<u>±</u> ±
Ŕ	USR IOT Be How	nest, Do Best!
System Status	Reboot Success	help
WiFi Setting		
Trans Setting	Rebooting Successfull	
Extra Function	and then login to the configuration interface.	
System Setting		
Firmware Update		
About USR		

12. Jei viskas atlikta teisingai, WiFi modulyje turi degti 3 LED:





# WiFi nustatymai valdymo panelėje

13. Valdymo lygį nustatykite į instaliuotojo (Installer)



### Pastaba:

įrenginys automatiškai grįžta į vartotojo lygį po 5 minučių po paskutinio mygtuko paspaudimo.

14. Tuomet eikite į WiFi nustatymų meniu ir pažymėkite du WiFi aktyvavimo punktus.



Dėl išsamesnės informacijos apsilankykite svetainėje <u>www.energysave.lt</u> arba kreipkitės į vietinį ES šilumos siurblio pardavėją.

Dėkojame už pirkinį, Jūsų ES kolektyvas